


RUTH LEE™

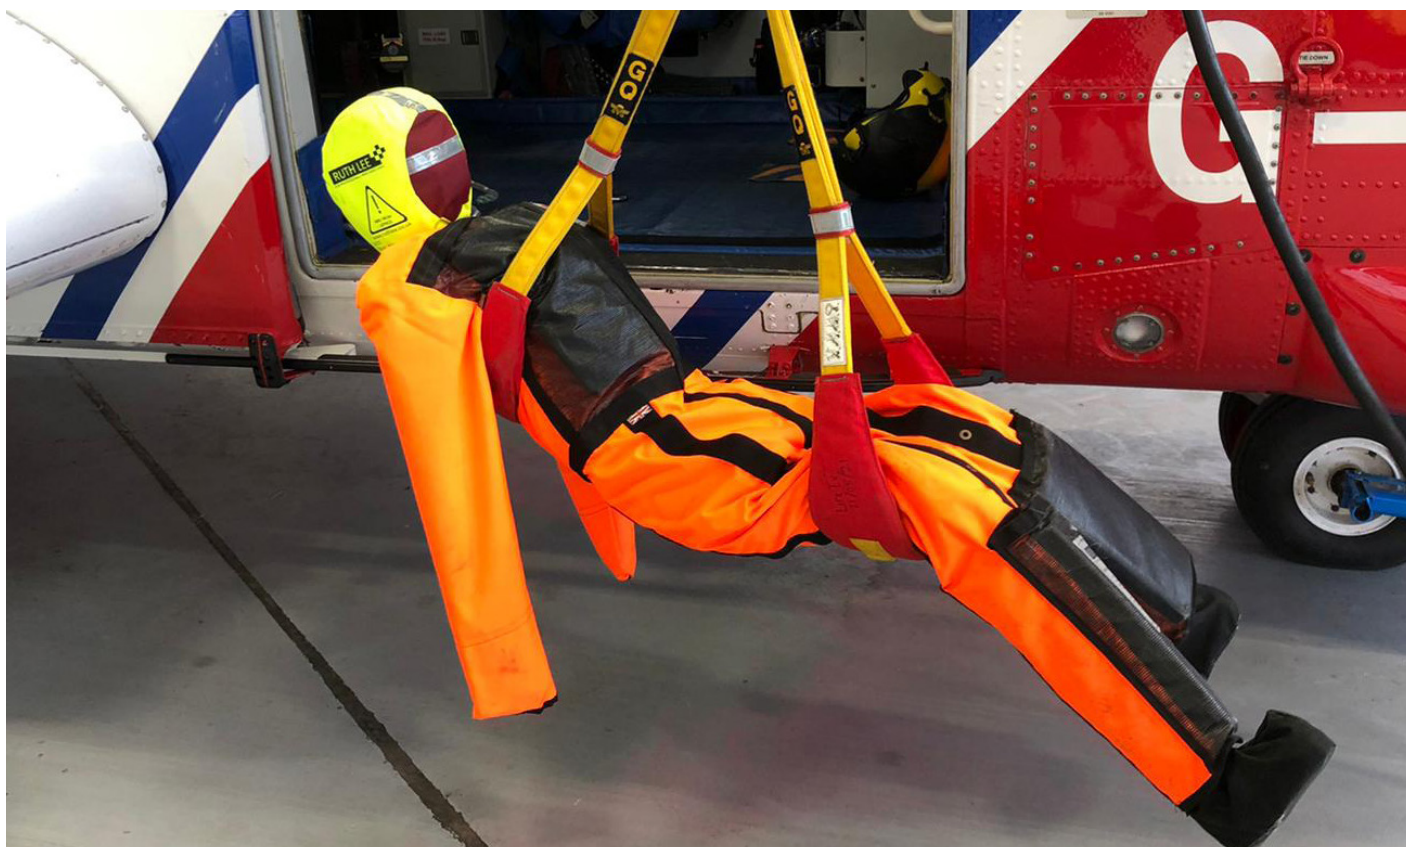

HELICOPTER WINCH TRAINING MANIKIN

FOR PROFESSIONALS WHO SAVE LIVES

Ruth Lee is a family business whose core values revolve around the care of our employees, service to our customers and uncompromising product quality. We are proud to serve YOU, the dedicated professionals who make such a valuable contribution to society.

We employ highly skilled people and source the most durable materials to ensure our products meet the highest international standards.

Our manikins are designed to represent the correct anatomic weight distribution of a real person, and we offer a range of different models to suit every conceivable scenario. This ensures that your training is as realistic and as effective as possible; preparing you for all eventualities.

LEARN MORE ABOUT OUR
EXTENSIVE RANGE OF
TRAINING MANIKINS,
BESPOKE BAGS,
OPERATIONAL
PRODUCTS AND FIRE
SIMULATION EQUIPMENT

SPEAK TO THE EXPERTS:

+44 (0) 1490 413 282 SALES@RUTHLEE.CO.UK WWW.RUTHLEE.CO.UK



HELICOPTER WINCH TRAINING MANIKIN

IDEAL FOR THE FOLLOWING TRAINING SCENARIOS:

Designed specifically for helicopter based water rescues where the casualties must be winched directly from water.

SPECIAL MATERIALS:

Carcass constructed from nylon mesh. High density polypropylene webbing (25mm rated to 207 Kg, 50mm rated to 440Kg) SOLAS reflective tape compliant with US Department of Transportation specification USCG 46 CFR, section 164.018, and International Maritime Organisation (IMO) resolution A.658(16). Non-absorbent closed cell foam – water absorption: 1 Day <0.1 (DIN 53428 1986) 28 Days < 0.5% VOL. Overall constructed from the same material used in Police ballistic/stab vests (conforms to OEKO-TEX® Standard 100, BS EN ISO 12947-2 & 14116: 2008).

FEATURES & BENEFITS:

- Has lighter legs than the standard Man Overboard model, meaning that the legs float more readily when fitting the harness/strops in water.
- The manikin will sit in a stable “W” position whilst winched to the helicopter.
- Compatible with standard and Hypothermic Lifting straps.
- Buckle clips on the inside knees and ankles allows for the option of keeping legs together.
- The tough nylon mesh carcass allows the water to penetrate quickly, allowing the legs to drop beneath the surface, leaving only the head and shoulders visible, if desired.

- Dry weight 40Kg (Adult) increases to approximately 65Kg retrieval weight from water.
- Floats horizontally, vertically or at 45 degrees, to simulate a live person or dead body – achieved by redistributing foam pieces within the overalls in a matter of seconds.
- Bright orange overalls and SOLAS reflective tape on the head make the manikin highly visible in open water.
- Strong webbing loop at the back allows easy handling, storage and suspension for drying.
- The soft feet are designed to allow rapid drainage to prevent too much water in the helicopter.
- Comes complete with overalls and soft feet, which are easily replaced if damaged.

NOT SUITED FOR:

- Use in temperatures above 100°C or flashover scenarios – See our Fire House manikin.

OPTIONAL EXTRAS:

- Black Search & Rescue hoodie to part cover the manikin to decrease visibility in the water.

RELEVANT TO:

- Coastguards & Lifeguards.
- Ministry of Defence Army and Navy.
- Fire & Rescue Services.
- Offshore operators.
- Shipping industries.

Designed and tested with assistance from the experts at Bristow Helicopters

AVAILABLE WEIGHTS & SIZES:

DESCRIPTION	MODEL CODE	HEIGHT (M)	WEIGHT (KG)	NATO STOCK #
Adult Manikin	RLNWHW	1.8	40	6910-99-753-0317